


OPERATING AND SERVICE MANUAL

8481B 8482B POWER SENSOR

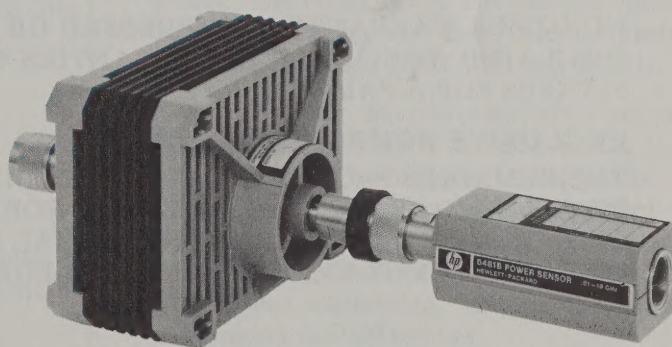

Printed: March 1981
© Hewlett-Packard Co., 1979

 **HEWLETT
PACKARD**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

GENERAL INFORMATION

This Operating and Service Manual contains information about initial inspection, performance tests, adjustments, operation, troubleshooting and repair of the Models 8481B and 8482B Power Sensors.

On the rear cover of this manual is a "Microfiche" part number. This number can be used to order a 10x15 cm (4x6 in.) microfilm transparency of the manual.

Specifications

Power Sensor specifications are listed in Table 1. These specifications are the performance standards, or limits against which the power sensors may be tested. Supplemental characteristics in Table 2 are not specifications but are typical characteristics included as additional information for the user.

Table 1. Specifications

Frequency Range: 8481B, 10 MHz to 18.0 GHz

8482B, 100 kHz to 4.2 GHz

Power Measurement Range:

1 mW to 25W (0 to +44 dBm) at 0 to $\leq +35^{\circ}\text{C}$

1 mW to 20W (0 to +43 dBm at $> +35^{\circ}\text{C}$ to $+55^{\circ}\text{C}$)

Power Linearity¹:

$\pm 4\%$, CW 3 to 25W

Maximum Input Power:

Average² 30W at 0 to $\leq +35^{\circ}\text{C}$

25W at $> +35^{\circ}\text{C}$ up to $+55^{\circ}\text{C}$

Peak 500W for the 8481B 10 MHz to ≤ 5.8 GHz

125W for the 8481B > 5.8 GHz up to 18.0 GHz

500W for the 8482B 100 kHz to 4.2 GHz

Energy per pulse 500W $\cdot\mu\text{s}$

Input Impedance: 50 ohms, nominal

Maximum SWR (Reflection Coefficient):

8481B: 1.10 (0.048) 10 MHz to ≤ 2.0 GHz

1.18 (0.083) > 2.0 GHz up to ≤ 12.4 GHz

1.28 (0.123) > 12.4 GHz up to 18.0 GHz

8482B: 1.10 (0.048) 100 kHz to ≤ 2.0 GHz

1.18 (0.083) > 2.0 GHz up to 4.2 GHz

Connectors:

Input is type N male³

Output mates with power meter connector cable.

¹ Negligible deviation below 3W CW.

² For pulses greater than 30W the maximum average power (Pa) is limited by the energy per pulse (E) in W $\cdot\mu\text{s}$ according to $\text{Pa} = 30 - 0.02\text{E}$.

³ Compatible with U.S. MIL-C-71B and U.S. MIL-C-39012B.

Table 2. Supplemental Characteristics*

Dimensions:

83 x 114 x 248 mm (approx. 3.25 x 4.50 x 9.75 in.)

Weight: 0.8 kg (1.7 lbs.)

* Supplemental characteristics are given for information purposes only.

Safety Considerations

The warning that follows is related to possible personal injury.

WARNING

The high power attenuator card has a substrate of beryllium oxide. Beryllium oxide in a powder form is a hazardous material and may be injurious to your health if inhaled. Do not perform any operation on the beryllium oxide that might generate dust. Defective attenuator cards should be returned to Hewlett-Packard for proper disposal.

Power Sensors Covered by Manual

Each power sensor has a two-part serial number. The first four digits and the letter comprise the serial number prefix. The last five digits for a sequential suffix which is unique to each power sensor. The contents of this manual apply directly to sensors having the serial number prefix 1801A for the 8481B and 1802A for the 8482B.

A power sensor manufactured after the printing of this manual may have a serial prefix that is not noted above. This unlisted serial prefix indicates that the sensor differs in some respect from the information in this manual. The manual for that sensor is supplied with a yellow Manual Changes supplement containing "change information" that documents the differences.

In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement is keyed to the manual print date and part number.

Complimentary copies of the supplement are available on request from your nearest Hewlett-Packard office.

For information concerning a serial number prefix not listed in this Manual or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

Description

The 25 watt power sensor is a calibrated combination of a 30 dB, 25 watt attenuator assembly and a low-power sensor assembly. The attenuator and sensor assemblies are calibrated as a set and must be used together if specified accuracies are to be attained. The combination will be referred to as the power sensor.

The power sensor is used for measuring the power supplied by an RF source to a 50-ohm load. In use, the power sensor is connected to the RF source and to an HP 435A or HP 436A Power Meter.

The power sensor presents a 50-ohm impedance to the RF source, and the power meter indicates the power dissipated in this load. The power is determined from the RF voltage developed across the sensor assembly load, and is expressed in mW (or W) and dBm. The HP 436A Power Meter can also provide readings, in dB, relative to a previous RF input to the power sensor.

The power sensor measures power levels from 0 dBm to +44 dBm (1 mW to 25W), at frequencies from 10 MHz to 18 GHz (8481B) or 100 kHz to 4.2 GHz (8482B).

The physical configuration of both power sensors is the same. However, because of the different frequency ranges covered, there are some changes in the part numbers and component values.

Calibration data is provided by a graph on the power sensor. The graph, individually prepared for each power sensor, shows the calibration factor (CAL FACTOR) at several frequencies. This calibration factor is used to adjust the power meter to suit the particular power sensor and RF frequency. Calibration data is valid only when the sensor assembly is used with the attenuator assembly that is supplied with it. Table 3 shows the uncertainty of the calibration factor.

further information, contact the nearest Hewlett-Packard Sales and Service office. The addresses of the major offices are provided at the rear of this manual.

The power sensor is warranted only when it is operated within its specifications, especially power handling capability. Any power sensor returned to Hewlett-Packard under warranty will be examined carefully to determine if the failure was possibly due to improper use.

Table 3. Uncertainty of Calibration Factor

Power Sensor	Frequency	Sum of Uncertainties (%)	Probable Uncertainties (%)*
8 4 8 1 B	0.01 GHz	5.4	2.7
	0.05	2.7	2.7
	0.1	6.4	3.0
	2.0	5.8	3.1
	3.0	5.8	3.1
	4.0	5.8	3.1
	5.0	5.8	3.1
	6.0	5.8	3.1
	7.0	5.8	3.1
	8.0	6.0	3.2
	9.0	6.0	3.2
	10.0	6.2	3.3
	11.0	6.2	3.3
	12.4	7.8	4.1
	13.0	7.8	4.1
	14.0	7.9	4.1
	15.0	7.9	4.1
	16.0	8.0	4.2
	17.0	8.0	4.2
	18.0	8.3	4.3
8 4 8 2 B	0.1 MHz	5.7	2.8
	0.3	5.7	2.8
	1.0	5.7	2.8
	3.0	5.7	2.8
	10.0	5.7	2.8
	30.0	5.7	2.8
	50.0	2.7	2.7
	100	5.6	3.3
	300	5.6	3.3
	1000	5.7	3.3
	2000	5.5	3.1
	3000	5.5	3.1
	4200	5.5	3.1

*Square root of the sum of the squares.

Warranty

The power sensor is warranted and certified as indicated on the warranty page of this manual. For

CAUTION

Removal of the D-ring that is on the sensor assembly WILL VOID THE WARRANTY. The input connector on the sensor has a D-ring to prevent the sensor from being connected to a high power source when its attenuator is not attached. The sensor must only be connected to the power meter for calibration or to the high power attenuator for RF measurement.

Accessory Supplied

A range switch scale is supplied with each power sensor. The range switch scale (disc) is to be used with the HP 435-series power meters. The disc is not required for the HP 436A because of the auto-ranging digital readout. The disc part number is HP 0350-0153.

Recommended Test Equipment

Table 4 lists the test equipment recommended to check, adjust, and troubleshoot the power sensor. If substitute equipment is used, it must meet or exceed the critical specifications.

INSTALLATION**Initial Inspection**

Inspect the shipping container. If the container or packing material is damaged it should be kept until the contents of the shipment have been checked mechanically and electrically. If there is mechanical damage or if the instrument does not pass the performance tests, notify the nearest Hewlett-Packard office. Keep the damaged shipping materials (if any) for inspection by the carrier and a Hewlett-Packard representative.

Handling Precaution**CAUTION**

Do not drop or otherwise mechanically damage the power sensor.

Mating Connectors

Refer to the power meter operating and service manual for interconnecting instructions to the power meter. The RF input connector is a Type-N male.

Table 4. Recommended Test Equipment

Instrument Type	Critical Specifications	Suggested Model	Use*
Digital Voltmeter/ Ohmmeter	Voltage Range: 100 mVdc to 100 Vdc Input Impedance: 10 megohms Resolution: 4-digit Accuracy: $\pm 0.05\% \pm 1$ digit Resistance Range: 1 ohm to 100,000 ohms Accuracy: $\pm 5\%$	HP 3455A	T
Oscilloscope	Bandwidth: dc to 50 MHz Sensitivity: Vertical, 0.2 V/div Horizontal, 1 ms/div	HP 1740A	A, T
10:1 Divider Probe	10 megohms 10 pF	HP 10004D	A
DC Power Supply	Range: 0–20 Vdc Load Regulation: 0.01% +4 mV	HP 6200B	T
*A = Adjustment, T = Troubleshooting			

CAUTION

The input connector on the sensor has a D-ring to prevent the sensor from being connected to a high power source when its attenuator is not attached. The sensor must only be connected to the power meter for calibration or to the high power attenuator for RF measurement.

Temperature -40 to $+75^{\circ}\text{C}$
 Humidity $\leq 95\%$ relative at 40°C
 Altitude $< 15\,300$ metres (50 000 feet).

Original Packaging

Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the sensor is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and serial number. Also, mark the container FRAGILE to assure careful handling. In any correspondence, refer to the sensor by model number and serial number.

Storage and Shipment Environment

The sensor should be stored in a clean, dry environment. The following limitations apply to both storage and shipment:

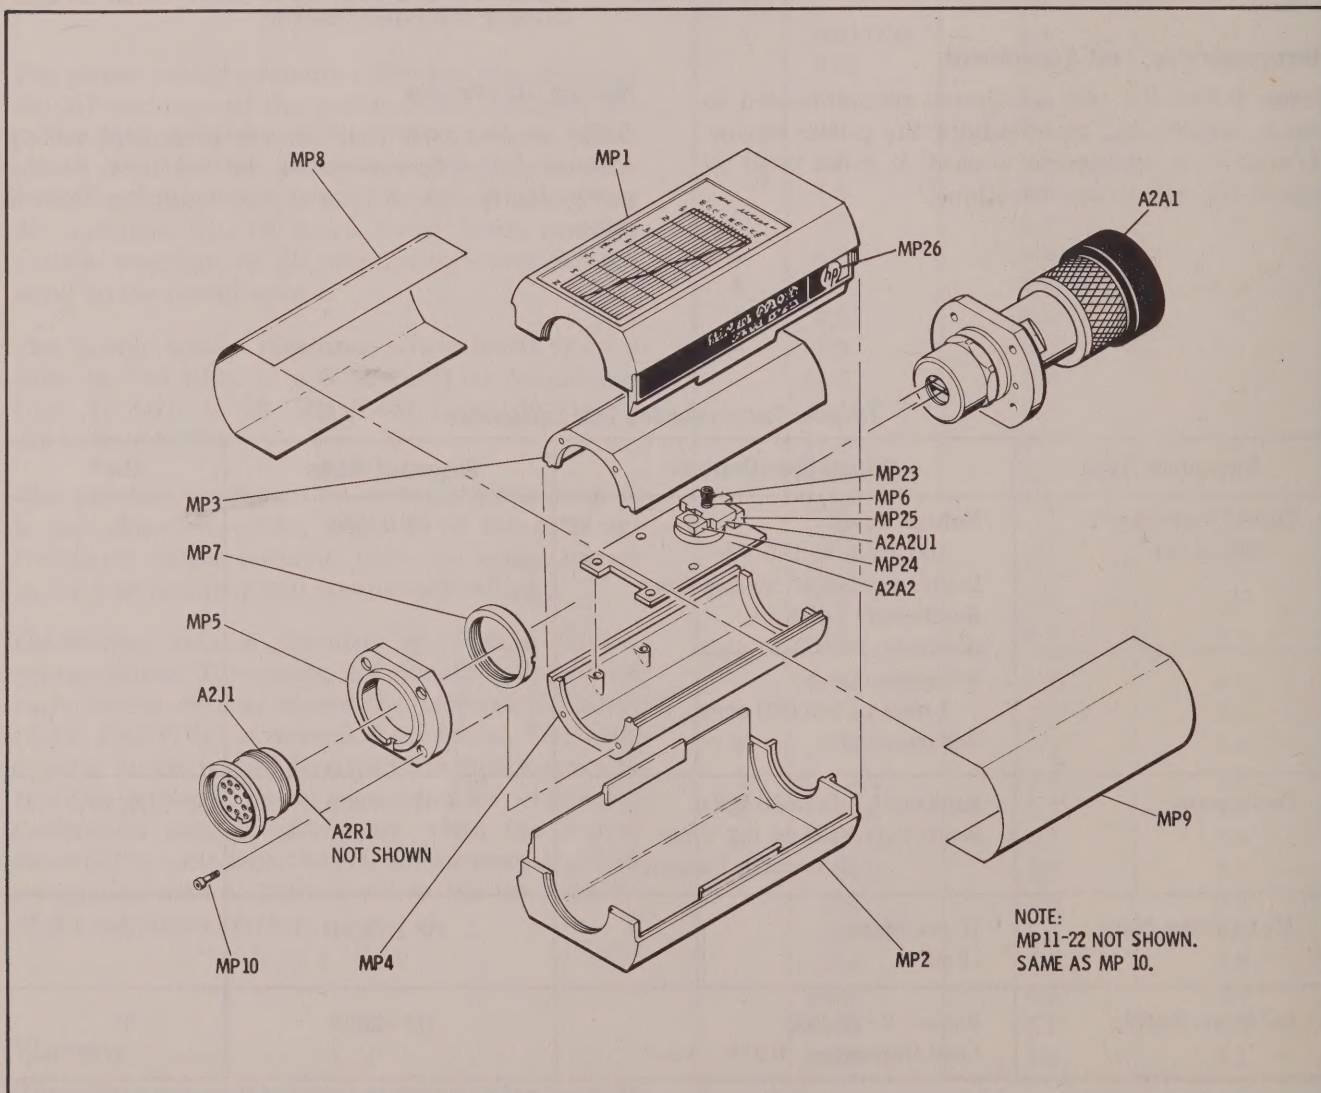


Figure 1. Illustrated Parts Breakdown of the A2 Sensor Assembly

OPERATION

Operating Procedures

Instructions for use of the power sensor are provided in the power meter manual. Note, however, the different calibration procedure described in the paragraph below. During operation, the operating precautions must be observed.

Environment

The operating environment for the power sensor should be as follows:

Temperature 0 to 55°C
 Humidity $\leq 95\%$ relative at 40°C
 Altitude <4600 metres (15 000 feet)

Operating Precautions

Before the power sensor is connected, the following precautions must be observed.

CAUTIONS

Before connecting the power sensor to another instrument, ensure that the instrument and power meter are connected to the protective (earth) ground.

Exceeding the energy and power levels shown below may result in damage to the power meter system.

Do not apply torque to the sensor or the attenuator cooling cage while connecting or disconnecting the Type N RF connector.

The maximum RF signal level that may be coupled to the power sensor is listed below. Damage will result when the sensor is subjected to power or energy levels outside the limits listed.

Maximum average power:

30W at 0 to $\leq +35^\circ\text{C}$

25W at $> +35^\circ\text{C}$ up to $+55^\circ\text{C}$

Maximum peak power:

500W for the 8481B 10 MHz to ≤ 5.8 GHz

125W for the 8481B > 5.8 GHz up to
18.0 GHz

500W for the 8482B 100 kHz to 4.2 GHz

Maximum energy per pulse:

500 W $\cdot\mu\text{s}$

Calibration is Performed as Follows:

1. Disconnect sensor from the attenuator.
2. Set CAL FACTOR on meter to the cal factor number listed on sensor label.
3. Press the meter auto ZERO button.
4. Connect sensor to the power meter POWER REF.
5. For the HP 435A Power Meter, set the RANGE switch to 1W, and adjust the CAL ADJ control to bring the needle on the meter to the CAL position.
6. For the HP 436A Power Meter, adjust the CAL ADJ control to obtain a reading of 1W on the digital display.
7. Disconnect sensor from power meter and connect to the attenuator.

PERFORMANCE TEST AND ADJUSTMENT

SWR (Reflection Coefficient) Performance Test

The maximum SWR and reflection coefficient for the power sensor are listed in Table 1. When making these measurements, the SWR of the unit under test must be less than those listed in Table 1 plus the measurement uncertainty of the measuring system.

FET Balance Adjustments

The sampling gate balance is affected by the relative positions of the wires in the sensor which connect to pins G and H of connector J2. One wire is black and white, and the other is brown and white. Once positioned, care must be used not to displace these wires.

To correctly position these wires, after replacement of A2A2U1, connect an oscilloscope as follows to display switching transients:

1. Test point A4TP4 in the HP 435A Power Meter, or
2. Test point A2TPAC (3) in the HP 436A Power Meter.

Adjust the black-and-white and brown-and-white wires until the switching transient amplitude is less than 0.8 Vp-p.

REPLACEABLE PARTS

Table 6 is a list of replaceable parts. Figure 1 illustrates the major parts of the sensor and Figure 2 shows the parts breakdown for the attenuator portion of the power sensor. To order a part, quote the Hewlett-Packard part number, the part number

check digit (CD), specify the quantity required, and address the order to the nearest Hewlett-Packard office. To order a part not listed in Table 6, give the sensor model number, serial number, the description and function of the part, and the quantity of parts required.

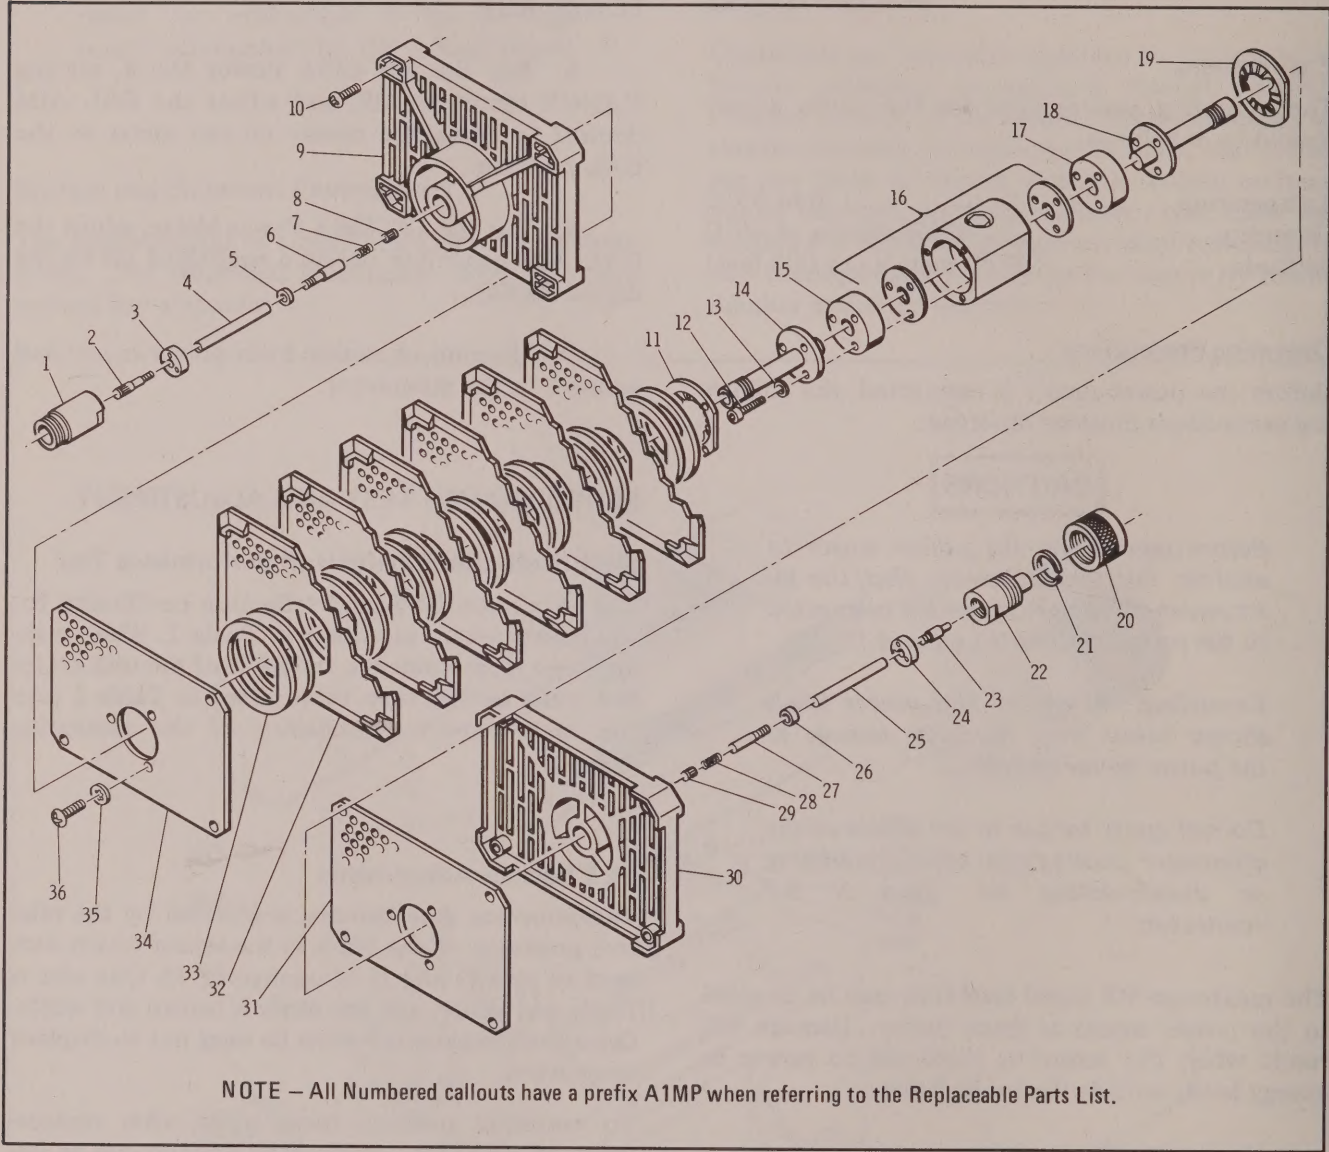


Figure 2. Illustrated Parts Breakdown of the A1 Attenuator Assembly

Table 5. Parts Associated with Item 16 in Figure 2

Part	Qty	HP Part Number	Part	Qty	HP Part Number
30 dB, 25W Attenuator Card	1	1GT-2674	Washer	2	08498-20017
Attenuator Body	1	08498-20011	Lock Screw	2	08498-20022
Card Clamp Half Section	2	08498-20012	Tuning Screw	2	08498-20023

Table 6. Replaceable Parts (1 of 2)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	08498-60001	9	1	30DB, 25W ATTENUATOR	28480	08498-60001
A1MP1	08498-80001	1	1	OUTER CONNECTOR BODY TYPE N, FEMALE	28480	08498-80001
A1MP2	1250-0915	8	1	CONTACT-RF CONN SER APC-N FEMALE	02660	131-149
A1MP3	5040-0306	0	2	INSULATOR	28480	5040-0306
A1MP4	08498-20014	0	2	CENTER CONDUCTOR	28480	08498-20014
A1MP5	08498-20019	5	2	DAMPER	28480	08498-20019
A1MP6	08498-20016	2	2	CONTACT HOLDER	28480	08498-20016
A1MP7	1460-1618	5	2	SPRING-COMPRESSION	28480	1460-1618
A1MP8	5020-3297	2	2	CONTACT-SLIDING	28480	5020-3297
A1MP9	08498-40002	8	2	ATTENUATOR HOUSING	28480	08498-40002
A1MP10	2200-0145	2	8	SCREW-MACH 4-40 .438-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
A1MP11	08498-20024	2	2	RFI SEAL	28480	08498-20024
A1MP12	3030-0070	2	6	SCREW-SKT HD CAP 4-40 .625-IN-LG ALY STL	00000	ORDER BY DESCRIPTION
A1MP13	2190-0030	1	6	WASHER-LK HLCL NO. 4 .115-IN-ID	28480	2190-0030
A1MP14	08498-20013	9	2	INNER CONNECTOR BODY	28480	08498-20013
A1MP15	08498-20018	4	2	INSULATOR	28480	08498-20018
A1MP16	08498-60002	0	1	ATTENUATOR CARTRIDGE ASSEMBLY	28480	08498-60002
	08498-60003	1		RESTORED (08498-60002) ATTEN. CART. ASSY	28480	08498-60003
A1MP17	08498-20018	4		INSULATOR	28480	08498-20018
A1MP18	08498-20013	9		INNER CONNECTOR BODY	28480	08498-20013
A1MP19	08498-20024	2		RFI SEAL	28480	08498-20024
A1MP20	1250-0918	1	1	NUT-RF CONN SERIES APC-N SST	02660	131-135-1
A1MP21	1250-0016	0	1	RING-RF CONNECTOR SERIES N: .75IN OD	02660	82-1138-6
A1MP22	1250-0916	9	1	CONNECTOR-RF APC-N M UNMTD 50-OHM	28480	1250-0916
A1MP23	1250-0917	0	1	CONTACT-RF CONN SER APC-N MALE	02660	131-147
A1MP24	5040-0306	0		INSULATOR	28480	5040-0306
A1MP25	08498-20014	0		CENTER CONDUCTOR	28480	08498-20014
A1MP26	08498-20019	5		DAMPER	28480	08498-20019
A1MP27	08498-20016	2		CONTACT HOLDER	28480	08498-20016
A1MP28	1460-1618	5		SPRING-COMPRESSION	28480	1460-1618
A1MP29	5020-3297	2		CONTACT-SLIDING	28480	5020-3297
A1MP30	08498-40002	8		ATTENUATOR HOUSING	28480	08498-40002
A1MP31	08498-00002	4	2	END FIN	28480	08498-00002
A1MP32	08498-40001	7	6	FRAMED ATTENUATOR FIN	28480	08498-40001
A1MP33	08498-00004	6	14	"D" RING SPACER	28480	08498-00004
A1MP34	08498-00002	4		END FIN	28480	08498-00002
A1MP35	2190-0014	1	6	WASHER-LK INTL T NO. 2 .089-IN-ID	28480	2190-0014
A1MP36	0520-0129	8	6	SCREW-MACH 2-56 .312-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
A2	8481B	0	1	SENSOR ASSEMBLY- 10MHZ TO 18GHZ	28480	8481B
A2	8482B	2	1	SENSOR ASSEMBLY- 100MHZ TO 4.2GHZ	28480	8482B
A2C1	0160-0565	2	7	CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C2	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C3	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C4	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C5	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C6	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2C7	0160-0565	2		CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-0565
A2J1	08481-60026	9	1	CONNECTOR ASSEMBLY	28480	08481-60026
A2MP1	08481-40002	9	2	SHELL-PLASTIC	28480	08481-40002
A2MP2	08481-40002	9		SHELL-PLASTIC	28480	08481-40002
A2MP3	08481-20011	8	2	CHASSIS	28480	08481-20011
A2MP4	08481-20011	8		CHASSIS	28480	08481-20011
A2MP5	08481-20008	3	1	END BELL	28480	08481-20008
A2MP6	1460-1224	9	1	SPRING-CPRSN .088-IN-OD .188-IN-OD-LG	28480	1460-1224
A2MP7	1251-3363	8	1	NUT, CONN, RND SPANNER NUT, AUDIO TYPE CONN	28480	1251-3363
A2MP8	08481-00002	5	2	SHIELD	28480	08481-00002
A2MP9	08481-00002	5		SHIELD	28480	08481-00002
A2MP22	3030-0422	8	13	SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
A2MP23	3030-0436	4	1	SCREW-SKT HD CAP 0-80 .5-IN-LG SST-300	00000	ORDER BY DESCRIPTION
A2MP24	5040-6939	7	1	CLAMP	28480	5040-6939
A2MP25	5040-6940	0	1	BLOCK	28480	5040-6940
A2MP26	7120-7129	7	1	LABEL-ID (FOR 8481B ONLY)	28480	7120-7129
	7120-7130	0	1	LABEL-ID (FOR 8482B ONLY)	28480	7120-7130
A2R1	0698-7255	0	1	RESISTOR 6.19K 1% .05W F TC=0+-100	24546	C3-1/B-T0-6191-G
A2A1	08481-60019	0	1	BULKHEAD ASSEMBLY-TYPE N(FOR 8481B ONLY)	28480	08481-60019
A2A1	08482-60011	3	1	BULKHEAD ASSEMBLY-TYPE N(FOR 8482B ONLY)	28480	08482-60011

See introduction to this section for ordering information
 *Indicates factory selected value

Table 6. Replaceable Parts (2 of 2)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2A2	08481-60025	8	1	INPUT AMPLIFIER BD.ASSY.(FOR 8481B ONLY)	28480	08481-60025
A2A2	08482-60013	5	1	INPUT AMPLIFIER BD.ASSY.(FOR 8482B ONLY)	28480	08482-60013
A2A2C1	0180-2515	8	2	CAPACITOR-FXD 47UF+-20% 6VDC TA (FOR 8481B ONLY)	28480	0180-2515
A2A2C1	0180-0555	2	1	CAPACITOR-FXD 39UF+-20% 10VDC TA (FOR 8482B ONLY)	28480	0180-0555
A2A2C2	0160-4306	7	4	CAPACITOR-FXD 100PF +-10% 100VDC CER	51959	0805C101K3P
A2A2C3	0160-4306	7		CAPACITOR-FXD 100PF +-10% 100VDC CER	51959	0805C101K3P
A2A2C4	0180-0594	9	1	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	28480	0180-0594
A2A2C5	0160-3094	8	1	CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
A2A2C6	0160-3879	7	1	CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2A2C7	0160-4306	7		CAPACITOR-FXD 100PF +-10% 100VDC CER	51959	0805C101K3P
A2A2C8	0160-4306	7		CAPACITOR-FXD 100PF +-10% 100VDC CER	51959	0805C101K3P
A2A2C9	0180-2515	8		CAPACITOR-FXD 47UF+-20% 6VDC TA	28480	0180-2515
A2A2C10	0180-2545	4	1	CAPACITOR-FXD 100UF+-20% 4VDC TA	28480	0180-2545
A2A2Q1	1854-0610	0	1	TRANSISTOR NPN SI TO-46 FT=800MHZ	28480	1854-0610
A2A2R1	0698-3260	9	1	RESISTOR 464K 1% .125W F TC=0+-100 (FOR 8481B ONLY)	28480	0698-3260
A2A2R1	0757-0483	8	1	RESISTOR 562K 1% .125W F TC=0+-100 (FOR 8482B ONLY)	28480	0757-0483
A2A2R2	0698-7248	1	1	RESISTOR 3.16K 1% .05W F TC=0+-100	24546	C3-1/8-T0-3161-G
A2A2R3	0698-7224	3	1	RESISTOR 316 1% .05W F TC=0+-100	24546	C3-1/8-T0-316R-G
A2A2R4	0698-7236	7	1	RESISTOR 1K 1% .05W F TC=0+-100	24546	C3-1/8-T0-1001-G
A2A2RT1	0811-3210	1	1	RESISTOR 31.6 5% .05W PWM TC=+5040+-250	14140	1409-1/20-31R6-J
A2A2U1	1813-0060	8	1	IC TO-8 PKG	28480	1813-0060
				A2 MISCELLANEOUS PARTS		
	0350-0153	7	1	SCALE-RANGE SWITCH (FOR 435-SERIES POWER METERS)	28480	0350-0153
	0590-1040	1	1	THREADED INSERT-NUT 0-80 .06-IN-LG SST	28480	0590-1040
	5040-6938	6	1	SPACER	28480	5040-6938
	7120-7127	9	1	LABEL-IDENTIFICATION	28480	7120-7127

Table 7. Manufacturers Code List

Mfr Code	Manufacturer Name	Address	Zip Code
00000	ANY SATISFACTORY SUPPLIER		
02660	AMPHENOL SALES DIV OF BUNKER-RAND	BROADVIEW IL	60153
14140	EDISON ELEK DIV MCGRAW-EDISON	MANCHESTER NH	03130
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
51959	VICLAN INC	SAN DIEGO CA	92138

See introduction to this section for ordering information
 *Indicates factory selected value

SERVICE

Test equipment which meets or exceeds the critical specifications in Table 4 may be used in place of the recommended instruments for troubleshooting the power sensor.

Figure 3 shows the locations of the components and assemblies of the sensor. Figure 4 is the schematic diagram of the power sensor.

Principles of Operation

The sensor assembly and the 30 dB, 25W attenuator assembly present a 50-ohm load to the RF source. The RF signal absorbed by the thermocouples in the sensor generates a dc voltage that is proportional to the RF input power.

Components A2E1 and A2E2 are ferrite beads situated in the black plastic block through which the wires from A2A1 pass to A2A2. Each ferrite bead increases the self-inductance of the wire passing through the bead, causing this portion of wire to act as an RF choke. The result is to minimize RF feedthrough to the A2A2 input amplifier assembly.

The dc output from the bulkhead assembly is applied to the two field-effect transistors (FET's) in A2A1U1. These transistors function as a sampling gate (or chopper). The sampling rate is controlled by a 220 Hz square wave supplied by the power meter. The sampling gate output (at pin 3 of A2A2U1) is a 220 Hz square wave having a voltage proportional to the RF power input.

The output of A2A2U1 is amplified about 700 times by an operational amplifier made up of A2A2 and the first amplifier stage in the power meter. Figure 5 is a simplified diagram of the power measuring system.

The Auto Zero Feedback circuit is coupled to the power sensor from the power meter. The dc voltage used to set the zero level is applied to the input of FET A2A2U1 by using A2A2R1 and the series resistance of the thermocouple A2A1TC1 as a voltage divider.

When the power sensor is used with the HP 436A Power Meter, A2R1 mount resistor is in the circuit. As a result, the power meter automatically selects the proper measurement range. The 6190 ohm resistance of A2R1 causes selection of the 0 to +44 dBm range. With the HP 435A Power Meter, A2R1 serves no function.

Troubleshooting

The troubleshooting information which follows is intended to isolate a problem to a stage. The defective component can then be identified by voltage and resistance checks. The field-effect transistors (FET's) in A2A2U1 are slightly light sensitive. As a result, dc levels are shifted slightly when the FET's are exposed.

CAUTION

Be extremely careful when measuring across the gold wires. They are delicate and can be damaged easily.

Resistance measured across the two gold wires leading to the A2A2 assembly should be 200 ± 10 ohms (8481B) or 245 ± 12.5 ohms (8482B). Note that excessive power will damage either the attenuator or the thermocouples. If the 30 dB pad is damaged it could present an open circuit to the input signal. If the thermocouples are damaged their resistance will increase. If the A2A1 Bulkhead Assembly is defective, the entire Bulkhead Assembly must be replaced.

The FET's in A2A2U1 may be checked by the following procedure:

1. Disconnect the cables from the power sensor.
2. Remove the upper chassis from the sensor. (refer to disassembly procedures).
3. Measure the resistance between pins 1 and 2 of the A2A2U1. The resistance should be 15 ± 0.75 ohms. The same resistance should be found between pins 8 and 9 of A2A2U1.
4. Short pins 4, 6, and 9 of A2A2U1. While the pins are shorted, measure the resistance between pins 2 and 3, and between pins 3 and 8, of A2A2U1. The resistance should be less than 40 ohms.
5. Set a power supply to 10 Vdc.
6. Connect the positive side of the power source to the power sensor signal ground. Connect the negative power supply lead to pins 4 and 6 of A2A2U1.
7. Measure the resistance between pins 2 and 3 of A2A2U1. Also measure the resistance between



Figure 3. Component and Assembly Locations of the Sensor

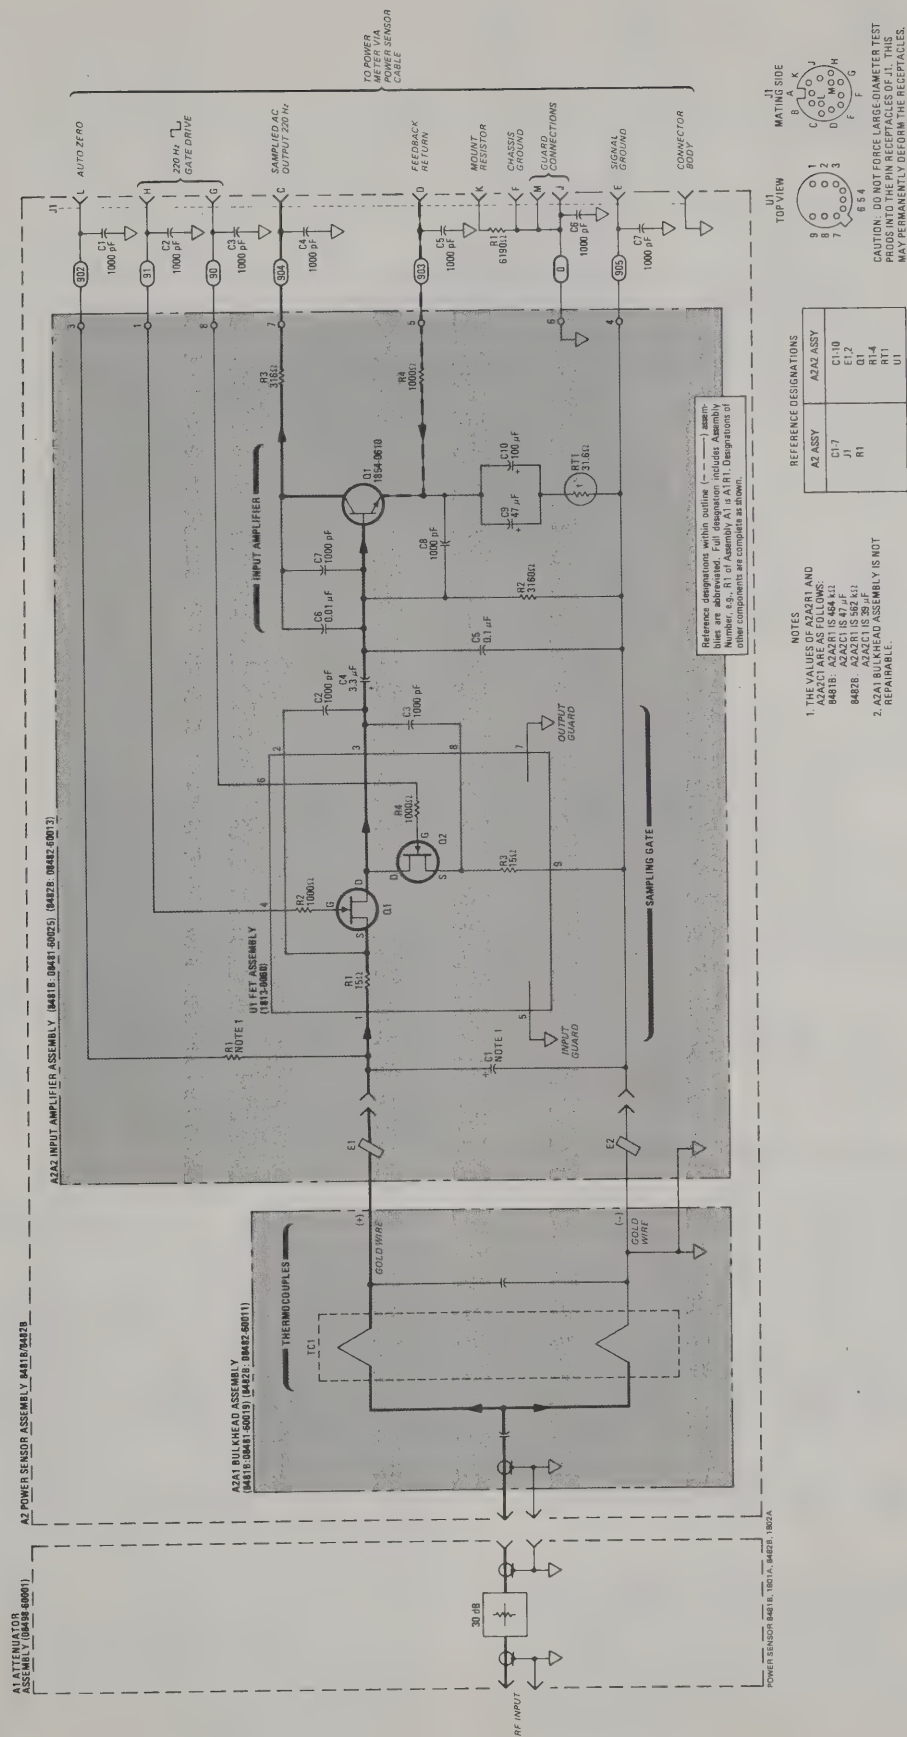


Figure 4. Schematic Diagram of the Power Sensor

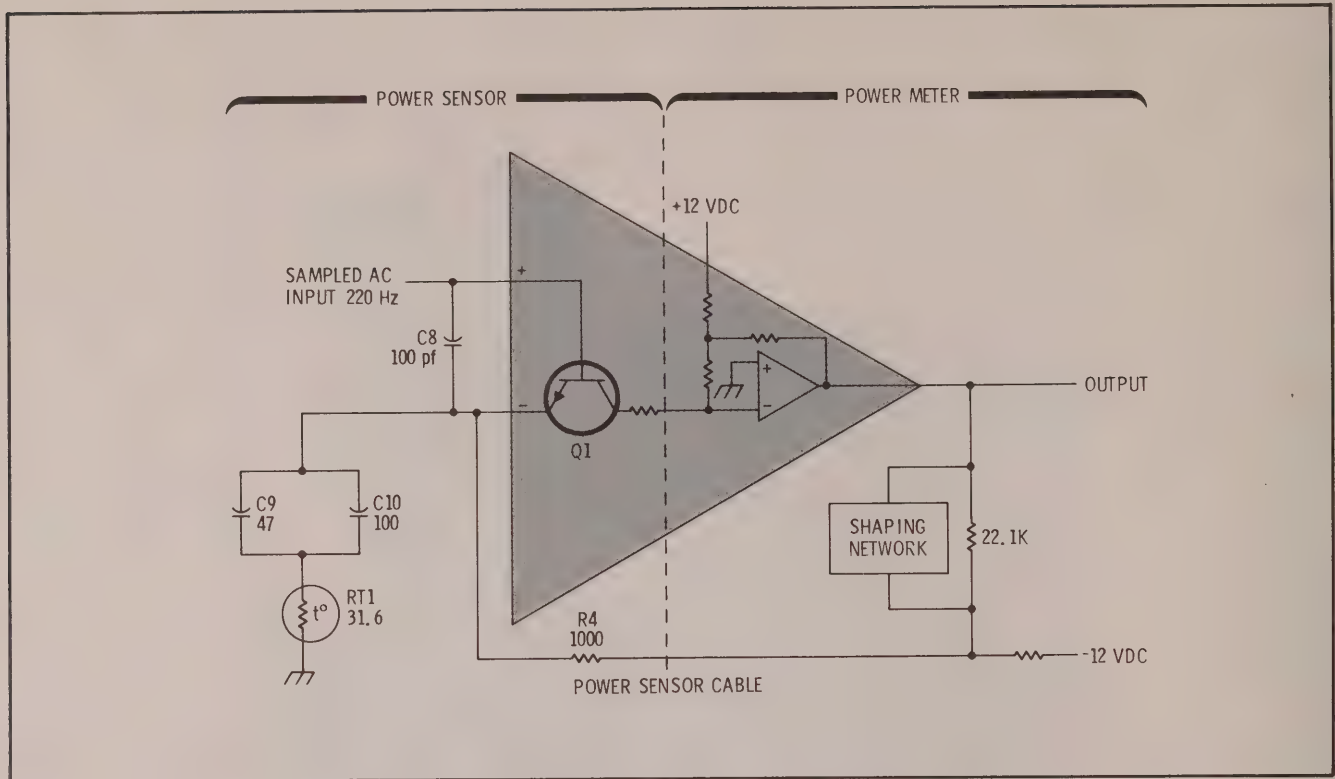


Figure 5. Simplified Diagram of the Power Measuring System

pins 3 and 8 of A2U1. In both cases, the resistance should be several hundred times the resistance found in step d.

The 220 Hz drive from the power meter should have the following levels:

1. -0.05 ± 0.05 Vdc (top of square wave).
2. > -9 Vdc (bottom of square wave).

In most cases it may be assumed that the operational amplifier (made up of A2A2Q1 and the first amplifier in the power meter) is operating correctly if the dc voltage on the metal cover of A2A2Q1 (collector) is -70 ± 30 mVdc.

REPAIR

Cleanliness

Do not handle the A2A2 input amplifier circuit board more than necessary. Dirt or moisture from the hands may make the circuits inoperative. Do not use solder-flux remover on the circuit board. It is particularly important to keep the area around A2A2U1 clean.

Soldering Techniques

The sensor is a very sensitive device, and is affected by very small differences in temperature between its components. Therefore, after the performance of any soldering in the unit, several hours must be allowed for the unit to reach thermal equilibrium before it is used or tested.

Capacitors A2A2C2, A2A2C3, A2A2C7, and A2A2C8 require low-temperature soldering techniques. The connections to these capacitors are a gold film deposited on a ceramic base. Molten solder results in the gold forming an amalgam with the solder, and the consequent removal of the gold from its ceramic base. Soldering must be done quickly, and a low-temperature soldering iron and solder must be used. The capacitors must be discarded if unsoldered. If integrated circuit A2A2U1 or transistor A2A2Q1 is replaced, two of these capacitors must be removed, and therefore must be replaced with new ones. The required low-temperature soldering iron and solder are as follows:

1. Hexacon Thermo-O-Trac soldering iron with J206X tip, temperature 600°F (311°C).
2. Low-temperature solder SN 62, HP Part Number 5090-0410.

Sensor Disassembly Procedures

CAUTIONS

Disassembly must be performed in the sequence described below, otherwise damage may be caused to the two gold wires between the A2A1 bulkhead assembly and the A2A2 input amplifier assembly. If these wires are damaged, the A2A1 bulkhead assembly must be returned to the factory for repair.

Each sensor has an individually prepared graph on the housing. If more than one sensor is disassembled, be sure to use the proper housing for each when they are reassembled.

Disassemble the sensor by performing the following steps:

CAUTION

The gold wires connecting the A2A1 Bulkhead Assembly and the A2A2 Input Amplifier Assembly are extremely delicate and may be easily broken. Be careful when working around them.

1. Remove the sensor from the high power attenuator. Insert the blade of a small screwdriver between the two-piece plastic shell at the rear of the sensor. Gently pry the sections apart. (See Figure 6.)

2. Proceed to the other side of the connector and again pry the cover sections apart. Remove the shells and magnetic shields.

3. Position the sensor as shown in Figure 7. The small hole ⑤ should be on the left side of the RF input connector. Remove the allen cap screws ①, ②, ⑩, and ⑬. Loosen ⑪ and ⑫. Remove the upper chassis from the sensor.

4. Remove the spring clamp cap screw ⑦ to free the gold leads which come from the bulkhead assembly.

5. Remove cap screws ③, ④, and ⑥.

6. Slide the bulkhead assembly straight out from the chassis.

7. Remove cap screws ⑧, ⑨, ⑪, ⑫, ⑭, and ⑮.

8. Lift the A2A2 Input Amplifier and A2J1 connector out of the chassis.

Sensor Reassembly Procedures

CAUTION

The gold wires connecting the A2A1 Bulkhead Assembly and the A2A2 Input Amplifier Assembly are extremely delicate and may be easily broken. Be careful when working around them.

1. Place the printed circuit board and connector into place.

2. Cap screws ⑧, ⑨, ⑪, ⑫, ⑭, and ⑮ must be inserted but not tightened. Refer to Figure 7.

3. Center the circuit board so there is equal air gap between each side and the chassis. Tighten ⑧, ⑨, ⑭, and ⑮.

4. With small hole ⑤ to the left, carefully insert the gold leads on A2A1 Bulkhead Assembly through the holes in the black plastic guide on A2A2 Input Assembly.

5. Insert screws ③, ④, and ⑥. Tighten only screw ⑥.

6. Position the ends of the gold wires over the pads on A2A2U1. The wires should not pass over the hole in the pad. Lightly clamp the leads in place with screw ⑦. DO NOT fully compress the spring.

7. Place the upper chassis in position and insert cap screws ①, ②, ⑩, and ⑬.

8. Tighten ①, ②, ③, and ④.

9. Tighten ⑩, ⑪, ⑫, and ⑬.

10. Place the plastic shells, magnetic shields, and the chassis together as shown in Figure 1. Snap the plastic shells together.

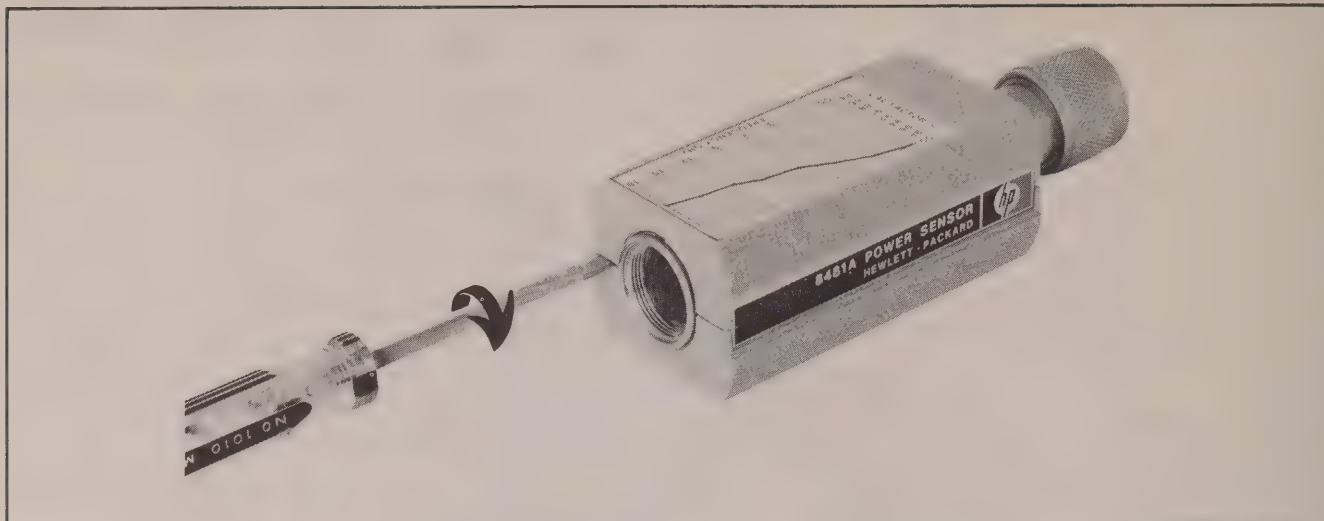


Figure 6. Removing the Sensor Cover

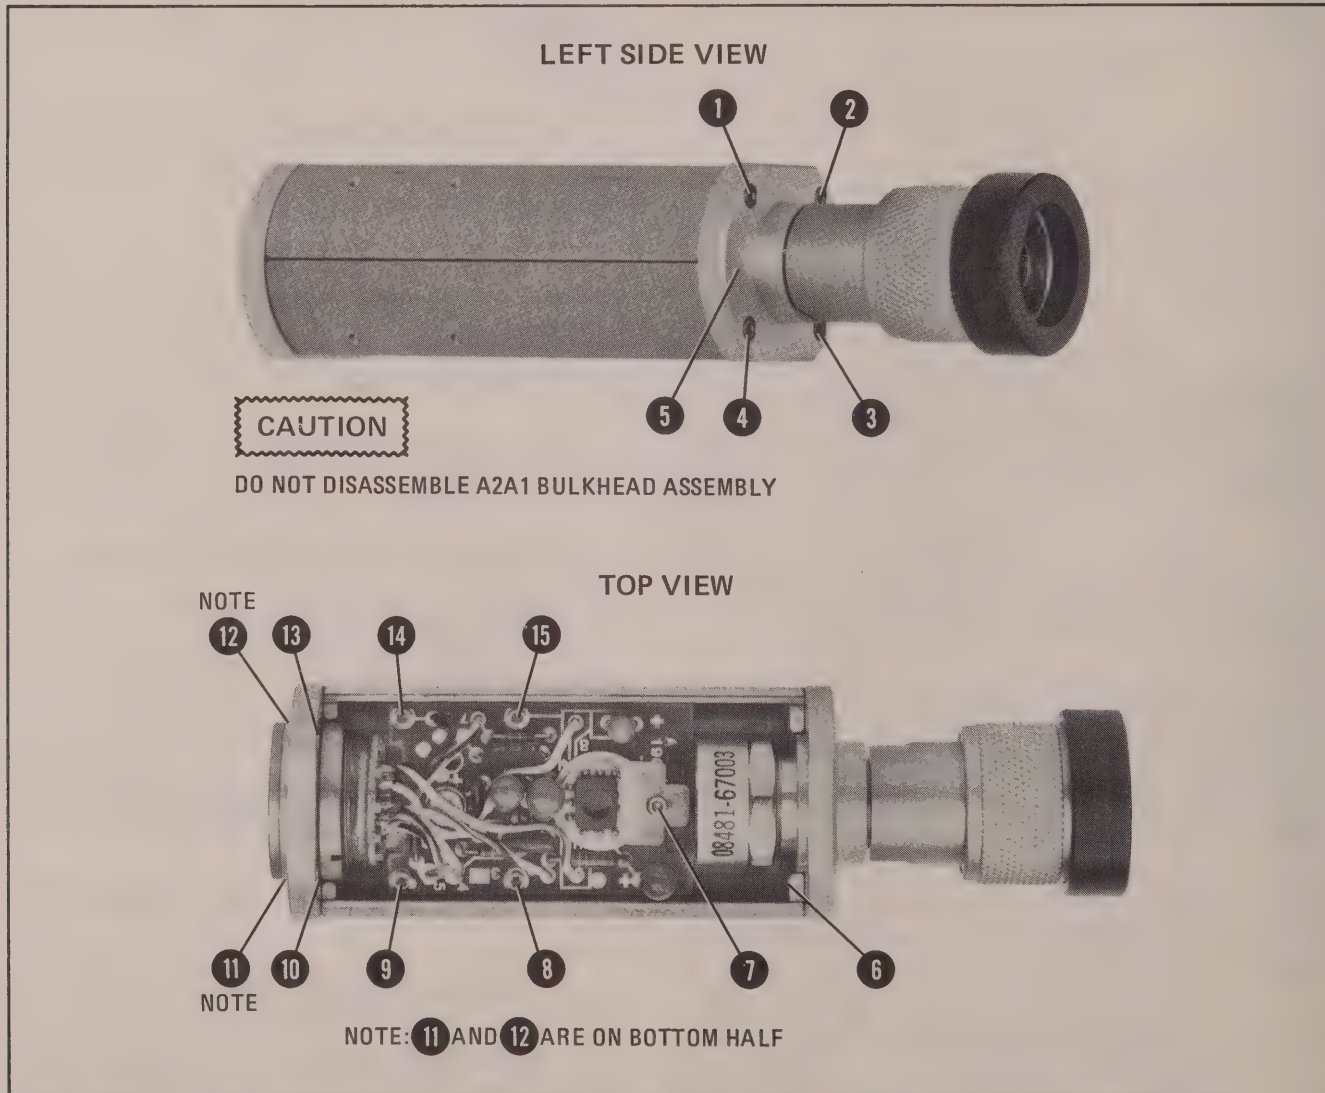


Figure 7. Sensor Hardware Locations

Attenuator Disassembly Procedure

NOTE

To replace the attenuator cartridge assembly follow this procedure, and see Figure 2 for numbered callouts.

1. Remove the 8 screws ⑩ that hold the two attenuator housings ⑨ and ③①.

2. The two housings will remain attached to the overall assembly unless the connector assemblies ① and ②② have been removed.

3. Remove the three screws ③⑥ and lock washers ③⑤ from both ends of the attenuator cartridge assembly ①⑥.

4. Remove the end fins ③① and ③④, the RFI seals ①① and ①⑨, spacers ③③ and the framed attenuator fins ③②. There are two "D" ring spacers between each of the framed attenuator fins and the end fins.

5. Remove the three cap screws ①② and the lock washers ①③ from both ends. It may be necessary to move the housing slightly to remove the screws.

6. Slide the inner connector bodies ①④ and ①⑧ from the attenuator cartridge assembly ①⑥. Be careful not to let the sliding contacts ⑧ and ②⑨, and compression springs ⑦ and ②⑧ to slide from the contact holders ⑥ and ②⑦. Under normal conditions they will not slide out.

7. At this point the attenuator cartridge assembly ①⑥ and the shim washers are free from the

overall assembly and can be returned to Hewlett-Packard. The attenuator cartridge assembly is the housing for the attenuator card, the card half sections, and the shims.

Attenuator Reassembly Procedure

1. Place the framed attenuator fins ③②, "D" ring spacers ③③ and end fins ③① and ③④ on the attenuator cartridge assembly ①⑥.

2. Position RFI seals ①① and ①⑨ and install end fins ③① and ③④ with screws ③⑥ and lock washers ③⑤.

3. Install the connector assemblies with the six screws ①② and lock washers ①③. Tighten screws evenly to a torque specification of 0.45 N·m (4 inch-pounds).

CAUTION

Overtightening screws ①② beyond the specified torque may distort the Card Clamp Half Sections and fracture the Attenuator Card.

4. Install the eight screws ①⑩ that hold the two housings ⑨ and ③①.

SALES OFFICES

Arranged alphabetically by country

ANGOLA

Teletra
Empresa Técnica de Equipamentos
Elétricos, S.A.R.L.
R. Barbosa Rodrigues,
41-I-PT.
Caixa Postal, 6487
Luanda
Tel: 35515/6

ARGENTINA

Hewlett-Packard Argentina S.A.
Santa Fe 2035, Martínez
6140 **Buenos Aires**
Tel: 792-1239, 798-6086
Telex: 122443 AR CIGY
Biotron S.A.C.I. y M.
Avda. Paseo Colon 221
9 piso
1399 **Buenos Aires**
Tel: 30-4846/1851/8384
34-9356/0460/4551
Telex: (33) 17595 BIO AR

AUSTRALIA

AUSTRALIA CAPITAL TERR.

Hewlett-Packard Australia Pty. Ltd.
121 Wollongong Street
Fyshwick, 2609
Tel: 804244
Telex: 62650

NEW SOUTH WALES

Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble, 2073
Tel: 4496566
Telex: 21561

QUEENSLAND

Hewlett-Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, 4000
Tel: 2291544

SOUTH AUSTRALIA

Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, 5063
Tel: 2725911
Telex: 82536

VICTORIA

Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, 3130
Tel: 89-6351
Telex: 31024 MELB

WESTERN AUSTRALIA

Hewlett-Packard Australia Pty. Ltd.
141 Stirling Highway
Nedlands, 6009
Tel: 3865455
Telex: 93859

AUSTRIA

Hewlett-Packard Ges.m.b.H.
Wehlstrasse 29
P.O. Box 7
A-1205 **Vienna**
Tel: 35-16-21-0
Telex: 13582/135066
Hewlett-Packard Ges.m.b.H.
Wehlstrasse, 29
A-1205 **Wien**
Tel: 35-16-21
Telex: 135066

BAHRAIN

Medical Only
Wael Pharmacy
P.O. Box 648
Bahrain
Tel: 54886, 56123
Telex: 8550 WAEI GJ

Al Hamidiya Trading and Contracting

P.O. Box 20074
Manama
Tel: 259978, 259958
Telex: 8895 KALDIA GJ

BAHRAIN

The General Electric Co. of Bangladesh Ltd.
Magnet House 72
Diksha Commercial Area
Motijheli, Dacca 2
Tel: 252415, 252419
Telex: 734

BELGIUM

Hewlett-Packard Benelux S.A./N.V.
Avenue du Col-Vert, 1,
(Groenkruggaan)
B-1170 **Brussels**
Tel: (02) 660 50 50
Telex: 23-494 paloben bru

BRAZIL

Hewlett-Packard do Brasil
I.E.C. Ltda.
Alameda Do Negro, 750
Alphaville
06400 **Barueri** SP
Tel: 429-3222
Hewlett-Packard do Brasil
I.E.C. Ltda.
Rua Padre Chagas, 32
90000-**Pôrto Alegre**-RS
Tel: 22-2998, 22-5621
Hewlett-Packard do Brasil
I.E.C. Ltda.
Av. Epitacio Pessoa, 4664
22471-**Rio de Janeiro**-RJ
Tel: 286-0237
Telex: 021-21905 HPBR-BR

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
Telex: 610-831-2431
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
Telex: 610-821-6141

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
10691 Sherridge Way
Richmond V6X 2W7
Tel: (604) 270-2277
Telex: 610-925-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
380-550 Century St.
St. James,
Winnipeg R3H 0Y1
Tel: (204) 786-6701
Telex: 610-671-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 469-7820
Telex: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
1020 Morrison Dr.
Ottawa K2H 8K7
Tel: (613) 820-6483
Telex: 610-563-1636

Hewlett-Packard (Canada) Ltd.

6877 Goreway Drive
Mississauga L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

Hewlett-Packard (Canada) Ltd.

552 Newbold Street
London N6E 2S5
Tel: (519) 686-9181
Telex: 610-352-1210

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 697-2323
Telex: 610-422-3032

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Mississauga.

CHILE

Jorge Calcagni y Cia. Ltda.
Arturo Buriel 065
Casilla 16475
Correo 9, **Santiago**
Tel: 220222
Telex: JCALCAGNI

COLUMBIA

Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 6287
Bogotá, D.E.
Tel: 269-8877
Telex: 44400

COLOMBIA

Instrumentación
H.A. Langebaek & Kier S.A.
Carrera 63 No. 49-A-31
Apartado 54098
Medellin
Tel: 304475

COSTA RICA

Científica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San José
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR

CYPRUS

Kyprionics
19 Gregorios Xenopoulos
Street
P.O. Box 1152
Nicosia
Tel: 45628/29
Telex: 3018

CZECHOSLOVAKIA

Hewlett-Packard
Obchodni zastupitelství v CSSR
Pismenny styl
Post. schránka 211
CS 118 01 **Praha** 011
CSSR
Vývojova a Provozní Zakladna
Vyzkumnych Ustav v
Bechovicích
CSSR-25907 **Bechovice u Prahy**
Tel: 89 93 41
Telex: 12133
Institute of Medical Bionics
Vyskumny Ustav Lekarskej
Bioniky
Jedlova 6
CS-88346 **Bratislava-Kramare**
Tel: 44-551
Telex: 93229

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 **Birkerød**
Tel: (02) 81 66 40
Telex: 37409 hpas dk
Hewlett-Packard A/S
Navervej 1
DK-8600 **Silkeborg**
Tel: (06) 82 71 68
Telex: 37409 hpas dk
ECUADOR
CYEDE Cia. Ltda.
P.O. Box 6423 CCI
Av. Eloy Alfaro 1749
Quito
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED

EGYPT

I.E.A.
International Engineering
Associates
24 Hussein Hegazi Street
Kasr-el-Aini
Cairo
Tel: 23 829
Telex: 93830
SAMITRO
Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdine-Cairo
Tel: 24932

EL SALVADOR

IPESA
Bulevar de los Heroes 11-48
Edificio Sarhan 1148
San Salvador
Tel: 252787
ETHIOPIA
Abdella Abdulmalik
P.O. Box 2635
Addis Ababa
Tel: 11 93 40

FINLAND

Hewlett-Packard Oy
Revontulintie, 7
SF-02100 **Espoo** 10
Tel: (90) 455 0211
Telex: 121563 hewpa sf

FRANCE

Hewlett-Packard France
Zone d'activités de
Courtatouff
Avenue des Tropiques
Boite Postale 6
91401 **Orsay**-Cédox
Tel: (01) 907 78 25
Telex: 600048F

Hewlett-Packard France

Chemin des Mouilles
B.P. 162
69130 **Ecully**
Tel: (78) 33 81 25
Telex: 310617F

Hewlett-Packard France

20, Chemin de La Cèprière
31081 **Toulouse**
Le Mirail-Cédox
Tel: (61) 40 11 12

GREECE

Kostas Karayannis
8 Omirou Street
Athens 133
Tel: 32 30 303/32/37 731
Telex: 21 59 62 RKAR GR

Hewlett-Packard France
Le Liguores
Place Romée de Villeneuve
13100 **Aix-en-Provence**
Tel: (42) 59 41 02
Telex: 410770F

Hewlett-Packard France

2, Allée de la Bourgonnette
35100 **Rennes**
Tel: (99) 51 42 44
Telex: 740912F
Hewlett-Packard France
18, rue du Canal de la Marne
67300 **Schiltigheim**
Tel: (88) 83 08 10
Telex: 890141F

Hewlett-Packard France

Immeuble péricentre
rue van Gogh
59650 **Villeneuve D'Ascq**
Tel: (20) 91 41 25
Telex: 160124F
Hewlett-Packard France
Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
93153 **Le Blanc Mesnil**-Cédox
Tel: (01) 931 88 50
Telex: 211032F

Hewlett-Packard France

Av. du Pt. Kennedy
33700 **Merignac**
Tel: (56) 97 01 81
Hewlett-Packard France
Immeuble Lorraine
Boulevard de France
91035 **Evry**-Cédox
Tel: 077 96 60
Telex: 692315F

Hewlett-Packard France

23 Rue Lothaire
57000 **Metz**
Tel: 45 53 50
Telex: 692315F
GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 **Frankfurt** 56
Tel: (06011) 50041
Telex: 04 13249 hpfm d

Hewlett-Packard GmbH

Technisches Büro Böblingen
Herrnberger Strasse 110
D-7030 **Böblingen**,
Württemberg
Tel: (07031) 667-1
Telex: 07265739 bbn
Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1
(Seestern)
D-4000 **Düsseldorf**
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d

Hewlett-Packard GmbH

Technisches Büro Hamburg
Kapstrasse 11
D-2000 **Hamburg** 60
Tel: (040) 63804-1
Telex: 21 63 032 hpdd d
Hewlett-Packard GmbH
Technisches Büro Hannover
Am Grossmarkt 6
D-3000 **Hannover** 91
Tel: (0511) 46 60 01
Telex: 092 3259

Hewlett-Packard GmbH

Technisches Büro Nürnberg
Neumeyerstrasse 90
D-8500 **Nürnberg**
Tel: (0911) 52 20 83
Telex: 0623 860

Hewlett-Packard GmbH

Technisches Büro München
Eschenstrasse 5
D-8021 **Tutzing**
Tel: (089) 6117-1
Telex: 0524985
Hewlett-Packard GmbH
Technisches Büro Berlin
Katharinenstrasse 2-4
D-1000 **Berlin** 30
Tel: (030) 24 90 86
Telex: 018 3405 hpbln d

GREECE

Kostas Karayannis
8 Omirou Street
Athens 133
Tel: 32 30 303/32/37 731
Telex: 21 59 62 RKAR GR

GUAM

Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8947
Tamuning 96911
Tel: 646-4513

GUATEMALA

IPESA
Avenida Reforma 3-48
Zona 9
Guatemala City
Tel: 316627, 314786,
66471-5, ext. 9
Telex: 4192 Teletro Gu

HONG KONG

Hewlett-Packard Hong Kong Ltd.
11th Floor, Four Seas Bldg.
212 Nathan Rd.
Kowloon
Tel: 3-697446 (5 lines)
Telex: 36678 HX

Medical/Analytical Only

Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
Hong Kong
Tel: 5-455644
Telex: 74766 SCHMX HX

INDIA

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadai
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093
Blue Star Ltd.
Band Box House
Prabhadai
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751

Blue Star Ltd.

Bhavdeep
Stadium Road
Ahmedabad 380 014
Tel: 43922
Telex: 012-234
Blue Star Ltd.
7 Hare Street
Calcutta 700 001
Tel: 23-0131
Telex: 021-7655

Blue Star Ltd.

9 Nehru Place
New Delhi 110 024
Tel: 682547
Telex: 031-2463
Blue Star Ltd.
T.C. 7/603 "Poonima"
Maruthankuzhi
Trivandrum 695 013
Tel: 65799
Telex: 0884-259

Blue Star Ltd.

11 Magarath Road
Bangalore 560 025
Tel: 55688
Telex: 0845-430
Blue Star Ltd.
Meekshi Mandiram
XXXXV/1379-2 Mahatma
Gandhi Rd.
Cochin 682 016
Tel: 32069
Telex: 085-514

Blue Star Ltd.

1-1-1171 Sarojini Devi Road
Secunderabad 500 033
Tel: 70126
Telex: 0155-459
Blue Star Ltd.
133 Kodambakkam High Road
Madras 600 034
Tel: 82057
Telex: 041-379

ICELAND

Medical Only
Elding Trading Company Inc.
Hafnarhvoli - Tryggvagblu
P.O. Box 895
Seykjavik
Tel: 1 58 201/63 03
Telex: 052 571-5171

INDONESIA

BERCA Indonesia P.T.
P.O. Box 496/Jkt.
Jln. Abdul Muis 62
Jakarta
Tel: 349255, 349886
Telex: 46748 BERSIL IA

BERCA Indonesia P.T.

P.O. Box 174/Sby.
23 Jln. Jimerto
Surabaya
Tel: 42027

IRELAND

Hewlett-Packard Ltd.
Kestrel House
Clanwilliam Place
Lower Mount Street
Dublin 2, Eire
Hewlett-Packard Ltd.
20 Avonberg Ind. Est.
Long Mile Road
Dublin 12
Tel: 514322/514224
Telex: 30439

Medical Only

Cardiac Services (Ireland) Ltd.
Kilmore Road
Dublin 5, Eire
Tel: (01) 315820
Medical Only
Cardiac Services Co.
95A Finaghy Rd. South
Belfast BT10 0BY
GB-Northern Ireland
Tel: (0232) 625566
Telex: 747626

ISRAEL

Electronics Engineering Div.
of Motorola Israel Ltd.
16, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Telex: 33569, 34164

ITALY

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio, 9
20063 **Cernusco Sul Naviglio** (MI)
Tel: (2) 903691
Telex: 334632 HEWPACKIT
Hewlett-Packard Italiana S.p.A.
Via Turazza, 14
35100 **Padova**
Tel: (49) 664888
Telex: 430315 HEWPACKI

Hewlett-Packard Italiana S.p.A.

Via G. Armetini 10
1-00143 **Roma**
Tel: (06) 54 69 61
Telex: 610514
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 **Torino**
Tel: (011) 659308
Telex: 221079

Hewlett-Packard Italiana S.p.A.

Via Principe Nicola 43 G/C
I-95126 **Catania**
Tel: (095) 37 05 04
Telex: 970291
Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco A
Capadimonte, 62A
80131 **Napoli**
Tel: (081) 710698

Hewlett-Packard Italiana S.p.A.

Via Martin Luther King, 38/111
I-40132 **Bologna**
Tel: (051) 402394
Telex: 511630

JAPAN

Yokogawa-Hewlett-Packard Ltd.
29-21, Takaido-Higashi
3-chome
Suginami-ku, **Tokyo** 168
Tel: 03-331-6111
Telex: 232-2024 YHP-Tokyo
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, **Osaka**-shi
Osaka, 532
Tel: 06-304-6021
Telex: 523-3624

Yokogawa-Hewlett-Packard Ltd.

Sunitomo Seimei Nagaya Bldg.
11-2 Shimosasajima-cho,
Nakamura-ku, **Nagoya**, 450
Tel: 052 571-5171
Yokogawa-Hewlett-Packard Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.

Mito Mitsui Building
105, 1-chome, San-no-maru
Mito, Ibaragi 310
Tel: 0292-25-7470

Yokogawa-Hewlett-Packard Ltd.

Inoue Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
Kumagaya, Saitama 360
Tel: 0485-24-6563

JORDAN



SALES OFFICES

Arranged alphabetically by country (cont.)

Mushko & Company, Ltd.
10, Bazar Rd.
Sector G-6/4
Islamabad
Tel: 28264

PHILIPPINES
The Online Advanced Systems Corporation
Rico House
Amorsolo cor. Herrera Str.
Legaspi Village, Makati
P.O. Box 1510
Metro Manila
Tel: 85-35-81, 85-34-91,
85-32-21
Telex: 3274 ONLINE

RHODESIA
Field Technical Sales
45 Kelvin Road North
P.O. Box 3458
Salebury
Tel: 705231 (5 lines)
Telex: RH 4122

POLAND
Biuro Informatyki Technicznej
Hewlett-Packard
Ul. Slawki 2, 6P
PL00-950 **Warszawa**
Tel: 39 59 62, 39 51 87
Telex: 81 24 53

PORTUGAL
Teletra-Empresa Técnica de Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (19) 68 70 72
Telex: 12598

Medical Only
Mundinter
Intercambio Mundial de Comercio S.A.R.L.
P.O. Box 2761
Avenida Antonio Augusto de Aguiar 138
P-Lisbon
Tel: (19) 53 21 31/7
Telex: 166911 munter p

PUERTO RICO
Hewlett-Packard Inter-Américas
Puerto Rico Branch Office
Calle 272,
#203 Urb. Country Club
Carolina 00630
Tel: (809) 762-7255
Telex: 345 0514

QATAR
Nasser Trading & Contracting
P.O. Box 1563
Doha
Tel: 22170
Telex: 4439 NASSER

ROMANIA
Hewlett-Packard
Reprezentanta
Bd.n. Balcescu 16
Bucuresti
Tel: 15 80 23/13 88 85
Telex: 10440

SAUDI ARABIA
Modern Electronic Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH

Modern Electronic Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Telex: 202049

Modern Electronic Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44813
Telex: 607136
Cable: ELECTA AL-KHOBAR

SINGAPORE
Hewlett-Packard Singapore (Pty.) Ltd.
6th Floor, Inchcape House
450-452 Alexandra Road
P.O. Box 58
Alexandra Post Office
Singapore 9115
Tel: 631788
Telex: HPSG RS 21486

SOUTH AFRICA
Hewlett-Packard South Africa (Pty.) Ltd.
Private Bag Wendywood,
Sandton, Transvaal, 2144
Hewlett-Packard Centre
Daphne Street, Wendywood,
Sandton, 2144
Tel: 802-5111/25
Telex: 8-4782

Hewlett-Packard South Africa (Pty.) Ltd.
P.O. Box 120
Howard Place,
Cape Province, 7450
Pine Park Centre, Forest Drive,
Pinelands,
Cape Province, 7405
Tel: 53-7955 thru 9
Telex: 57-0006

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 458 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
c/o Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanésado 21-23
E-Barcelona 17
Tel: (3) 203 6200 (5 lines)
Telex: 52603 hpbe e

Hewlett-Packard Española, S.A.
Av. Ramón y Cajal, 1
Edificio Sevilla, planta 9º
E-Sevilla 5
Tel: 64 44 54/58
Hewlett-Packard Española S.A.
Edificio Albia II 7º B
E-Bilbao 1
Tel: 23 83 06/23 82 06
Hewlett-Packard Española S.A.
C/Ramon Gordinio 1
(Entlo.)
E-Valencia 10
Tel: 96-361.13.54/361.13.58

SRI LANKA
Metropolitan Agencies Ltd.
209/9 Union Place
Colombo 2
Tel: 35947
Telex: 1377METRO LTD CE
SUDAN
Radison Trade
P.O. Box 921
Khartoum
Tel: 44048
Telex: 375
SURINAM
Surtel Radio Holland N.V.
Grote Hofstr. 3-5
P.O. Box 155
Paramaribo
Tel: 72118, 77880

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 3, Pack
S-161 **Bromma 20**
Tel: (08) 730 05 50
Telex: 10721
Cable: MEASUREMENTS
Stockholm
Hewlett-Packard Sverige AB
Frörlundsgatan 30
S-421 32 **Västra Frölunda**
Tel: (031) 49 09 50
Telex: 10721 via Bromma office

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 307
CH-8952 **Schlieren-Zürich**
Tel: (01) 7305240
Telex: 53933 hpag ch
Cable: HPAG CH
Hewlett-Packard (Schweiz) AG
Château Bloc 19
CH-1219 **Le Lignon-Geneva**
Tel: (022) 96 03 22
Telex: 27333 hpag ch
Cable: HEWPAKAG Geneva

SYRIA
General Electronic Inc.
Nuri Basha-Ahmal Ebn Kays Street
P.O. Box 5781
Damascus
Tel: 33 24 87
Telex: 11215 ITIKAL
Cable: ELECTROBOR
DAMASCUS
Medical only
Sawah & Co.
Place Azmé
B.P. 2308
Damascus
Tel: 16 367-19 697-14 268
Telex: 11304 SATACO SY
Cable: SAWAH, DAMASCUS
Suleiman Hilal El Miawi
P.O. Box 2528
Mamoun Bilal Street, 56-58
Damascus
Tel: 11 46 63
Telex: 11270
Cable: HILAL DAMASCUS

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
Bank Tower, 5th Floor
205 Tun Hsu North Road
Taipei
Tel: (02) 751-0404 (15 lines)
Hewlett-Packard Far East Ltd.
Taiwan Branch
68-2, Chung Cheng 3rd. Road
Kaohsiung
Tel: (07) 242318-Kaohsiung
Telex: 668068
Analytical Only
San Kwang Instruments Co., Ltd.
20 Yung Sui Road
Taipei
Tel: 3615446-9 (4 lines)
Telex: 22894 SANKWANG

TANZANIA
Medical Only
International Aeradio (E.A.), Ltd.
P.O. Box 861
Dar es Salaam
Tel: 2125-1 Ext. 265
Telex: 41030
THAILAND
UNIMESA Co. Ltd.
Elcom Research Building
2538 Sukumvit Ave.
Bangchak, Bangkok
Tel: 39-32-387, 39-30-338
Telex: 35947

TRINIDAD & TOBAGO
CARTEL
Caribbean Telecoms Ltd.
P.O. Box 732
69 Frederick Street
Port-of-Spain
Tel: 62-53068
TUNISIA
Tunis Electronique
31 Avenue de la Liberté
Tunis
Tel: 280 144
Corema
1 ter. Av. de Carthage
Tunis
Tel: 253 821
Telex: 12319 CABAM TN

TURKEY
TEKNIM Company Ltd.
Riza Sah Pehlivi
Caddesi No. 7
Kavaklıdere, **Ankara**
Tel: 275800
Telex: 42155
Teknim Com., Ltd.
Barbaros Bulvarı 55/12
Besikyas, **Istanbul**
Tel: 613 546
Telex: 23540
E.M.A.
Muhendislik Kolektif Sirketi
Medina Eldem Sokak 41/6
Yüksel Caddesi
Ankara
Tel: 17 56 22
Yilmaz Özyurek
Milli Müdafaa Cad 16/6
Kızılay
Ankara
Tel: 25 03 09 - 17 80 26
Telex: 42576 ÖZEK TR

UNITED ARAB EMIRATES
Emilac Ltd. (Head Office)
P.O. Box 1641
Sharjah
Tel: 35412/3
Telex: 8136

Emilac Ltd. (Branch Office)
P.O. Box 2711
Abu Dhabi
Tel: 331370/1

UNITED KINGDOM
Hewlett-Packard Ltd.
King Street Lane
Winnersh, Wokingham
Berkshire RG11 5AR
GB-England
Tel: (0734) 784774
Telex: 84 71 78/9
Hewlett-Packard Ltd.
Fournier House,
257-263 High Street
London Colney
St. Albans, Herts
GB-England
Tel: (0727) 24400
Telex: 1-89527 16
Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
Altrincham
Cheshire WA14 1NU
GB-England
Tel: (061) 928 6422
Telex: 668068
Hewlett-Packard Ltd.
Lygon Court
Hereford Rise
Dudley Road
Halesowen,
West Midlands, B62 8SD
GB-England
Tel: (021) 501 1221
Telex: 339105
Hewlett-Packard Ltd.
Wedge House
799, London Road
Thornton Heath
Surrey, CR4 6XL
GB-England
Tel: (01) 684-0103/8
Telex: 946825
Hewlett-Packard Ltd.
14 Wesley St.
Castleford
Yorks WF10 1AE
Tel: (0977) 550016
Telex: 5557335
Hewlett-Packard Ltd.
Office Park North
Pensacola 32575
Tel: (904) 476-8422
110 South Hoover Blvd.
Suite 120
Tampa 33609
Tel: (813) 872-0900

FLORIDA
P.O. Box 24210
2727 N.W. 62nd Street
Fort Lauderdale 33309
Tel: (305) 973-2600
4080 Woodcock Drive #132
Brownell Building
Jacksonville 32207
Tel: (904) 398-0663
P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (305) 859-2900
P.O. Box 12826
Suite 5, Bldg. 1
Office Park North
Pensacola 32575
Tel: (904) 476-8422
110 South Hoover Blvd.
Suite 120
Tampa 33609
Tel: (813) 872-0900

GEORGIA
P.O. Box 105005
450 Interstate North Parkway
Atlanta 30348
Tel: (404) 955-1500
TWX: 910-766-4890
Medical Service Only
Augusta 30903
Tel: (404) 736-0592
P.O. Box 2103
1172 N. Davis Drive
Warner Robins 31098
Tel: (912) 922-0449

HAWAII
2875 So. King Street
Honolulu 96826
Tel: (808) 955-4455
ILLINOIS
211 Prospect Rd.
Bloomington 61701
Tel: (309) 663-0383
5201 Tolliver Dr.
Rolling Meadows 60008
Tel: (312) 255-9800
TWX: 910-687-2260

INDIANA
7301 North Shadeland Ave.
Indianapolis 46250
Tel: (317) 842-1000
TWX: 810-260-1797
IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 351-1020

KENTUCKY
10170 Linn Station Road
Suite 525
Louisville 40223
Tel: (502) 426-0100
LOUISIANA
P.O. Box 1449
3229-39 Williams Boulevard
Kenner 70062
Tel: (504) 443-6201

MARYLAND
7121 Standard Drive
Parkway Industrial Center
Hanover 21076
Tel: (301) 796-7700
TWX: 710-862-1943
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684
MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
Tel: (301) 948-6370
TWX: 710-828-9684

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
724 West Century Ave.
Kalamazoo 49002
Tel: (616) 323-8362
MINNESOTA
2400 N. Prior Ave.
St. Paul 55113
Tel: (612) 636-0700
MISSISSIPPI
322 N. Mart Plaza
Jackson 39206
Tel: (601) 982-9363
MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087
1024 Executive Parkway
St. Louis 63141
Tel: (314) 878-0200

NEBRASKA
Medical Only
Directors Square
Memphis 38131
Tel: (901) 346-8370
NEVADA
Las Vegas
Tel: (702) 736-6610
NEW JERSEY
Crystal Brook Professional Building
Route 35
Eatonville 07724
Tel: (201) 542-1384
W. 120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW MEXICO
P.O. Box 11634
Station E
11300 Lomas Blvd., N.E.
Albuquerque 87123
Tel: (505) 292-1330
TWX: 910-989-1185
156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2484
TWX: 910-983-0550
NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
New York 10001
Tel: (212) 971-0800
5858 East Molloy Road
Syracuse 13211
Tel: (315) 455-2486
1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 510-221-2183
Tel: (513) 671-7400

NORTH CAROLINA
5605 Roanne Way
Greensboro 27409
Tel: (919) 852-1800
OHIO
Medical/Computer Only
9920 Carver Road
Cincinnati 45242
Tel: (513) 891-9870
16500 Sprague Road
Cleveland 44130
Tel: (216) 243-7300
TWX: 810-423-9430

OKLAHOMA
P.O. Box 32008
6301 N. Meridian Avenue
Oklahoma City 73112
Tel: (405) 721-0200
9920 E. 42nd Street
Suite 121
Tulsa 74145
Tel: (918) 665-3300
OREGON
17890 S.W. Lower Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
PENNSYLVANIA
1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670
111 Zeta Drive
Pittsburgh 15238
Tel: (412) 782-0400

SOUTH CAROLINA
P.O. Box 6442
6941-0 N. Trenholm Road
Columbia 29206
Tel: (803) 782-6493
TENNESSEE
8906 Kennesaw Pike
Knoxville 37919
Tel: (615) 691-2371
3070 Directors Row
Directors Square
Memphis 38131
Tel: (901) 346-8370
TEXAS
4171 North Mesa
Suite C110
El Paso 79902
Tel: (915) 533-3555
P.O. Box 42816
10535 Harwin St.
Houston 77036
Tel: (713) 776-6400
Lubbock
Medical Service Only
Tel: (806) 799-4472
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75081
Tel: (214) 231-6101
205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241

UTAH
2160 South 3270 West Street
Salt Lake City 84119
Tel: (801) 972-4711
VIRGINIA
P.O. Box 9669
2914 Hungary Spring Road
Richmond 23228
Tel: (804) 285-3431
Computer Systems/Medical Only
Airport Executive Center
Suite 302
5700 Thurston Avenue
Virginia Beach 23455
Tel: (804) 460-2471
WASHINGTON
Bellevue Office Pk.
1203 - 114th Ave. S.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2440
P.O. Box 4010
Spokane 99202
Tel: (509) 535-0864
WEST VIRGINIA
Medical/Analytical Only
4604 Mac Corkle Ave., S.E.
Charleston 25304
Tel: (304) 925-0492
WISCONSIN
150 Sunny Slope Road
Brookfield 53005
Tel: (414) 784-8800

FOR U.S. AREAS
NOT LISTED:
Contact the regional office nearest you:
Atlanta, Georgia... **North Hollywood, California**...
Rockville, Maryland...
Rolling Meadows, Illinois...
Their complete addresses are listed above.
USSR
Hewlett-Packard Representative Office
USSR
Pokrovsky Boulevard
4/17-kw 12
Moscow 101000
Tel: 294.20.24
Telex: 7825 hewpak su
YUGOSLAVIA
Iskra Commerce, n.s.o.l.
Zastopstvo Hewlett-Packard
Obilic Venac 26
YU 11000 Beograd
Tel: 636-955
Telex: 11530
Iskra Commerce, n.s.o.l.
Zastopstvo Hewlett-Packard
Miklosijeva 38/VII
YU-61000 Ljubljana
Tel: 321-674, 315-879
Telex: 31583
URUGUAY
Pablo Ferrando S.A.Cel.
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Telex: 702 Public Booth
Para Pablo Ferrando
VENEZUELA
Hewlett-Packard de Venezuela C.A.
P.O. Box 50933
Caracas 105
Los Ruices Norte
3A Transversal
Edificio Segre
Caracas 107
Tel: 239-4133 (20 lines)
Telex: 25146 HEWPAK
ZAMBIA
R.J. Tibury (Zambia) Ltd.
P.O. Box 2792
Luusaka
Tel: 73793
MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN, PLEASE CONTACT:
Hewlett-Packard S.A. Mediterranean and Middle East Operations
35, Kolokotroni Street
Platia Kefallariou
GR-Kifissia-Athens, Greece
Tel: 8080359/429
Telex: 21-6588
Cable: HEWPAKSA Athens
SOCIALIST COUNTRIES NOT SHOWN, PLEASE CONTACT:
Hewlett-Packard Ges.m.b.H. Handelskai 52
P.O. Box 7
A-1205 Vienna, Austria
Tel: (0222) 35 16 21 to 27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a
OTHER AREAS NOT LISTED, CONTACT:
Hewlett-Packard Intercontinental
3495 Deer Creek Road
Palo Alto, California 94304
Tel: (415) 856-1501
TWX: 910-373-1267
Cable: HEWPAK Palo Alto
Tel: 034-8300, 034-8493
Hewlett-Packard S.A.
7, rue du Bois-du-Lan
P.O. Box
CH-1217 Meyrin 2 - Geneva Switzerland
Tel: (022) 82 70 00
Cable: HEWPAKSA Geneva
Telex: 2 24 86
***Service Only**
2-15-80

